


# How To Place a Finger Correctly

To successfully perform enrollment and authentication, it is important to place your finger in the correct position and accurately capture the vein information




① Gently place your finger on the finger placement detection area so that your fingertip touches the finger placement marker (raised part).

※The photos and illustrations show the FVA-U4ST. The guidance applies similarly to the M2ST and embedded versions as well.

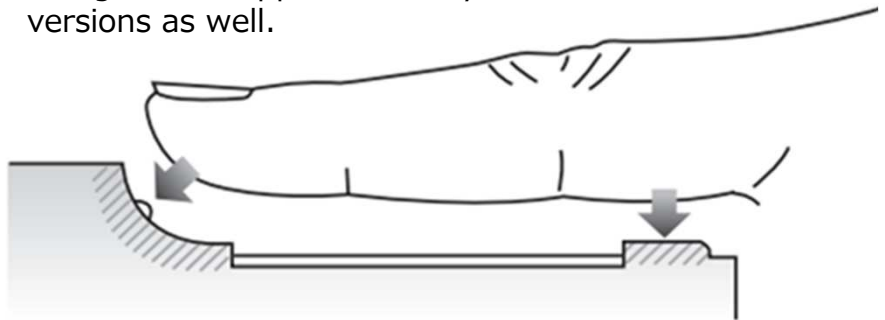

※Please be careful not to press too hard

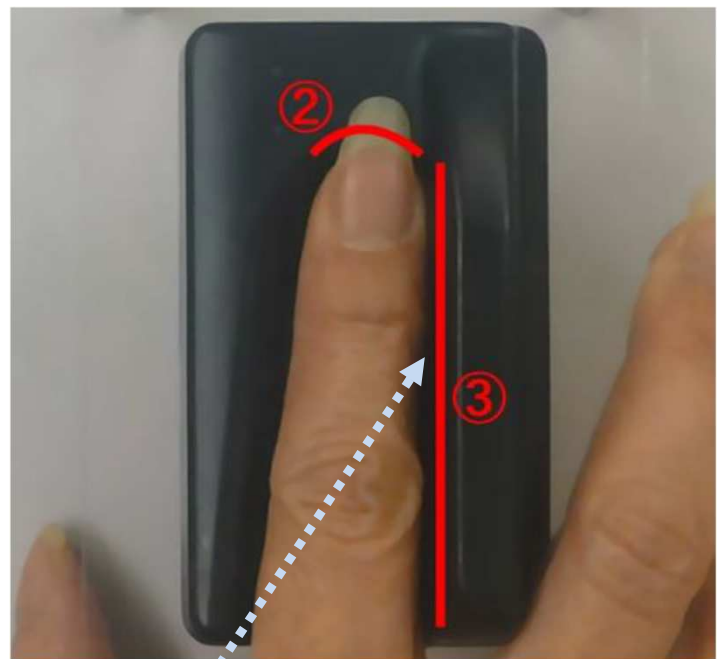


The finger-side should lightly touch the right wall.

② Align the fingertip (not the nail) with the tip of the indentation


③ The finger-side should lightly touch the right wall.

# Incorrect finger placement


× The finger is placed at an angle.

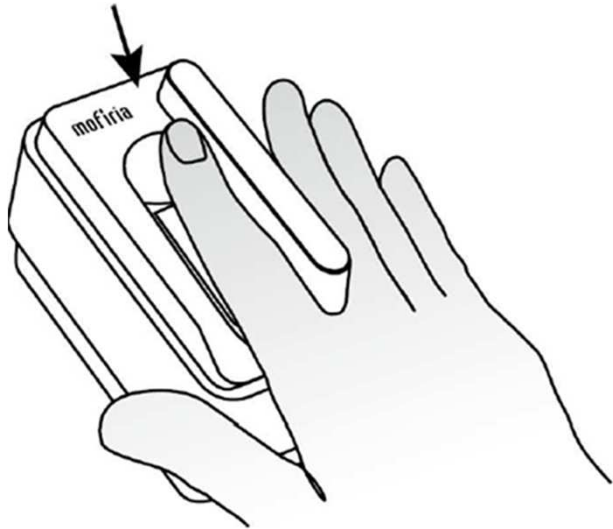


× The fingertip is not positioned correctly.

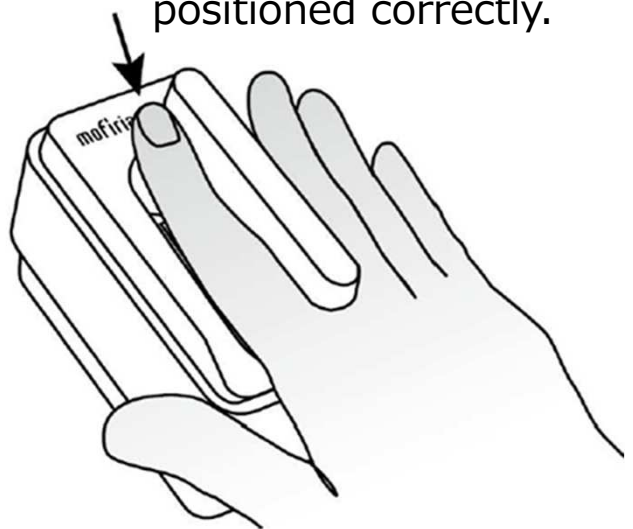


× The finger is being pressed too hard.

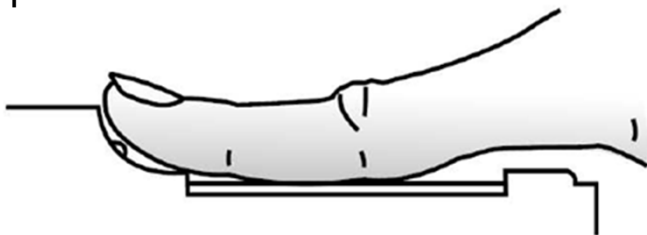

× The finger is bent.

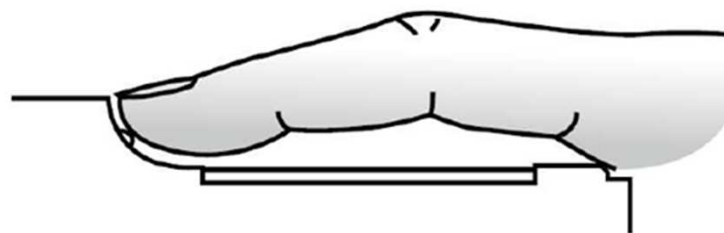

× The finger is placed in a rotated position.

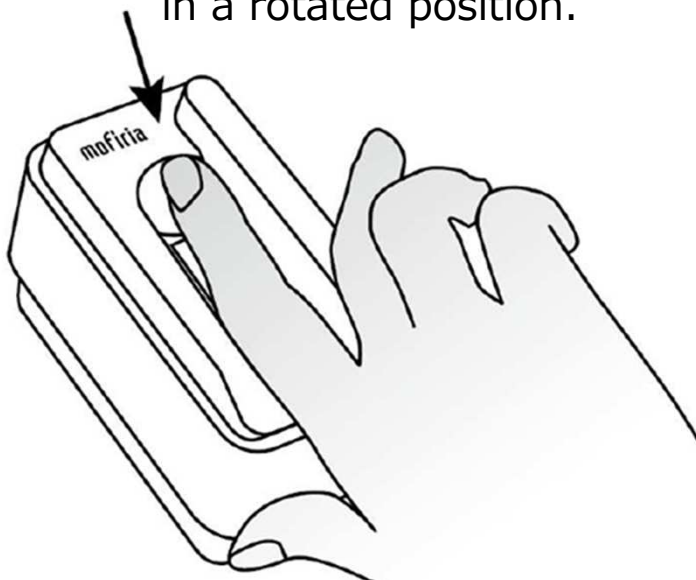

× The finger is lifted / not fully in contact.

